




FUSION HARDWARE GROUP

TOLL FREE CUSTOMER SERVICE 877-215-4683


SFN-G000012
Rev 10/12-00

KNOB

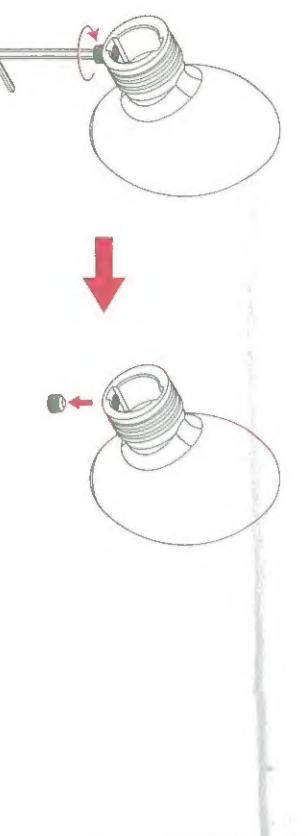

INTERIOR

LEVER

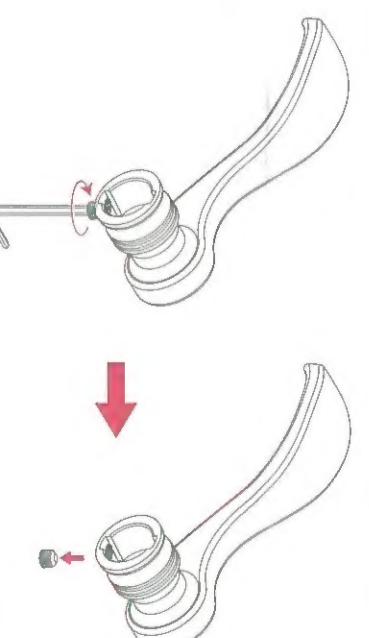


INTERIOR

Handleset Installation

One-Piece Interior - Interconnect

- ① Bore lower grip anchor position as indicated by the included bore template
- ② Install upper Deadbolt latch. It is pre-set for 2-3/8" backset. Adjust as shown for 2-3/4" backset
- ③ Install lower Passage latch into door, first adjusting for appropriate backset
- ④ Place exterior portion of handleset into door, sliding spindle through the installed latch
- ⑤ Insert Cylinder Core without key into collar, Exterior Rose or plate, and through latch on outside of door with the cylinder core tailpiece laying flat in the horizontal position
- ⑥ Install deadbolt position mounting plate with two screws into exterior core chassis
- ⑦ Install interior interconnect chassis with two short finish screws in the lower position, and two longer finish screws in the upper position
- ⑧ Install knob or lever with set screw
- ⑨ Install interior anchor for lower grab. Snap on finish cover.

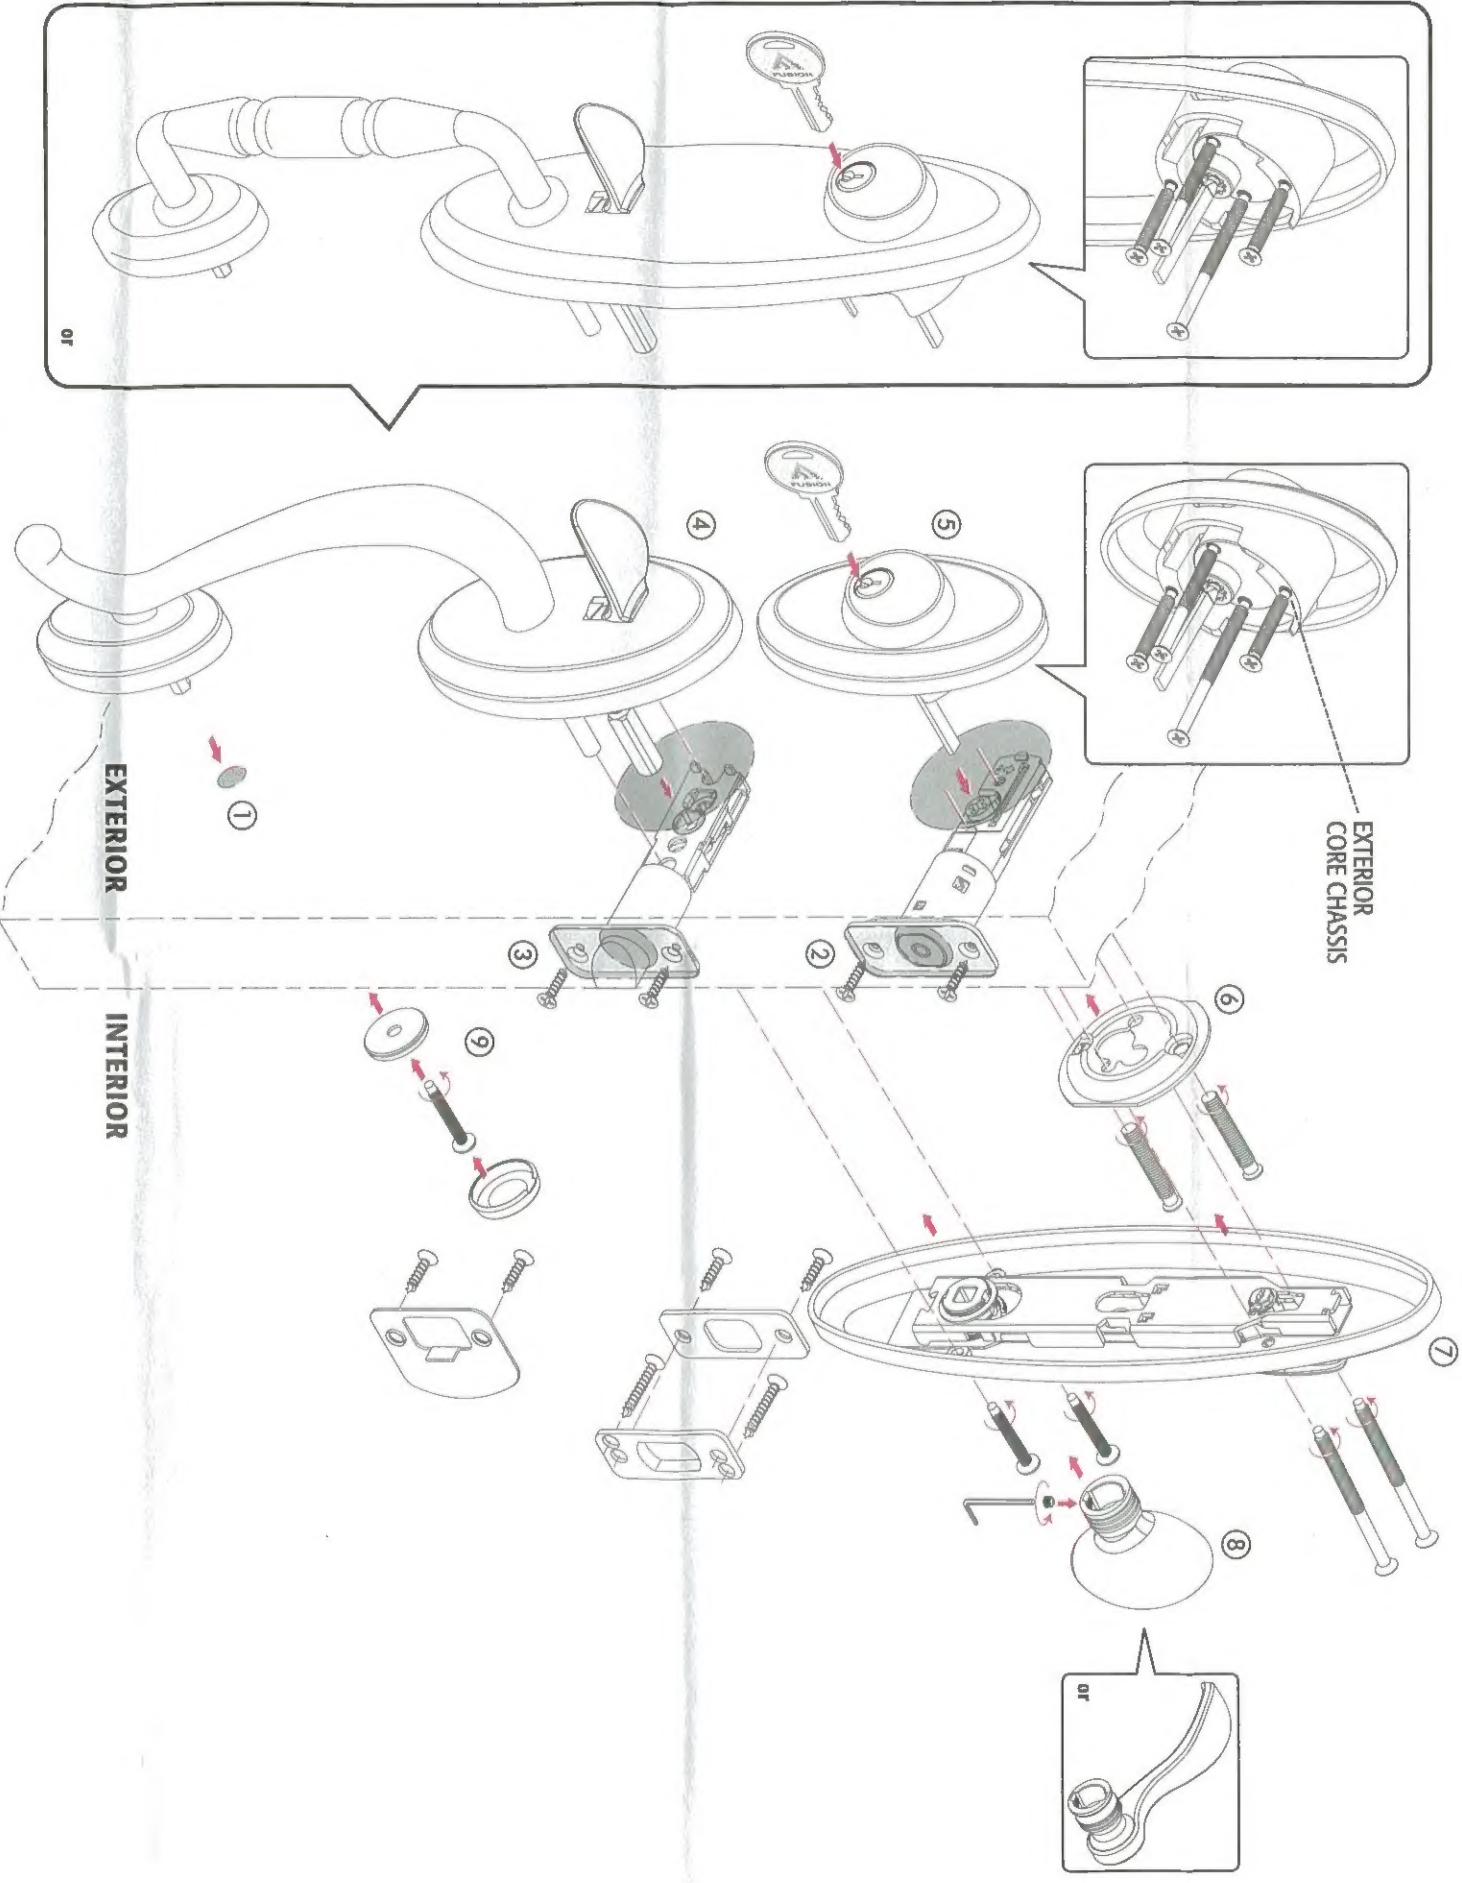

EXTERIOR


INTERIOR

(2) THIS STEP IS FOR AN ADJUSTABLE DEADBOLT LATCH ONLY

LATCH BACKSET ADJUSTMENT. (Latch backset adjustment only needs to be made if your door needs a 2-3/4" (70 mm) backset. Otherwise NO ADJUSTMENT is necessary.)

For 2 3/8" (60 mm)

For 2 3/4" (70 mm)

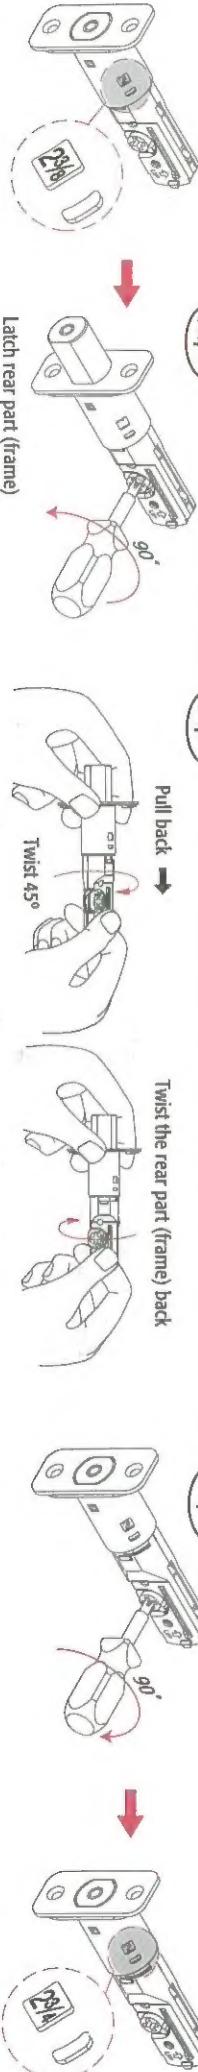

Latch rear part (frame)